



95 0 7

# POLLY POCKET FLIP - TOP WATCH


## INSTRUCTIONS FOR USE

### NORMAL DISPLAY MODE

1. Normal display mode shows hour and minutes with colon flashing.
2. Press S2 button once to show month and date only. The month and date will appear for 2 seconds. then return to normal display (hour and minutes).
3. Press S2 button twice to show seconds only. Watch will display seconds until S2 is pressed again to return to normal display (hour and minutes).

### SETTING THE CORRECT TIME

All setting involves pressing S1. The set digit appears in series, month, date, hour, minutes ( see illustration ). To change any function, press S1 until relevant function appears. Press S2 until correct figure appears. When all functions are correct, press S1 until hours and minutes show, with colon flashing. If colon is not flashing, press S2.

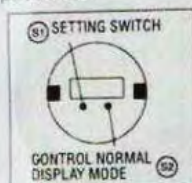


SET MODE FORMAT	
Set month	1
Set Date	1
Set Hour	12 A
Set Minutes	25



### TO CHANGE BATTERY

Remove the screws holding the back plate on the underside of the watch. Remove old battery and replace with new one. Ensure that the positive side of the battery is facing you. Replace back plate and screws.

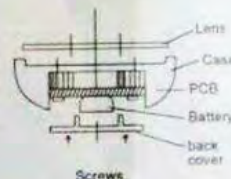

### GUARANTEE

This product is guaranteed to be free from defective workmanship and materials for a period of 12 months. Any part which is defective within one year of purchase or develops defects under normal use, will be replaced or repaired without cost. Any returns must be accompanied with the original receipt indicating the date of purchase. WESCO\* assumes no responsibility for the service or replacement of watches which have been tampered with abused or mishandled. This guarantee is in addition to the consumer's statutory rights and does not affect those rights in any way. All returns to:-

WESCO Limited  
Unit A, Marlborough Close  
Parkgate Industrial Estate  
Knutsford, Cheshire, WA 16 8XN

**WARNING:**  
CHOKING HAZARD - small parts  
Not for Children under 3 yrs.

ANOTHER **WESCO**® PRODUCT



PLEASE RETAIN THIS INFORMATION FOR FURTHER REFERENCE

**CE** 1995 MADE IN CHINA

© 1995 BLUEBIRD TOYS (UK) LTD  
UNDER LICENSE FROM ORIGIN PRODUCTS LIMITED